

PAD06/PAD03 Control Panel

PAD06 PAD03 is suitable for MPC6535 MPC6515.

7.1 PAD06 Main Interface

Datum: laser head move the original point of the machine slowly. It is mainly used to estimate

4/Z+: p

or down (one step)

9 Error Alarm Interface

9.1 Error Alarm Interface

Brief

PAD03 (PAD06) Operating Panel will offer real-

